


Endura Quick Start Guide




Page Sequence

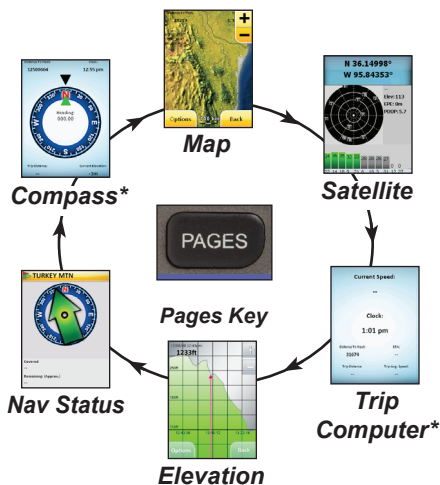

* These pages are optional for Out&Back

Main Menu



	Power — The Power key is located on the left side of the unit. To turn Endura On or Off, press and hold the Power key for three seconds.
	Mark & Arrow keys — The Mark key is used to save your present position as a waypoint or to select highlighted menu items. The Arrow keys move the cursor on the map, select map items and highlight menu items.
	Zoom out/Zoom in — Used to change the map scale. Press both keys together for device lock/unlock.

Using the touch screen


Endura features touch screen controls to select menu items, scroll lists and move the cursor to different parts of the map. To select an item, just tap the screen. To pan the map or scroll a list, touch and drag.



* 9 8 8 - 0 1 6 0 - 5 5 A *

Marking present position as a waypoint

1. Press and hold the **MARK** key for three seconds. To personalize the waypoint, touch the *Name* or *Icon* fields.
2. Touch the *Back* tab to return to the previous page.

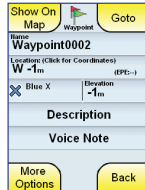

Find menu

Used to search for items ranging from waypoints and geocaches to trails and routes. To access the Find menu, press **MENU** and touch *Find*.



Selecting a destination

1. Press **MENU** and touch *Find*.
2. Touch the desired category on the Find menu.
3. Select the desired destination from the list. The Goto tab will appear in the upper right corner.
4. Touch the *Goto* tab.
5. Press **PAGES** to select the Map or Nav Status page.



Map page



Pan Map — drag finger across screen to pan map

Return to present position — touch *Back*

Zoom — touch +/- keys to change map scale

Select items — touch desired onscreen map item, or use **ARROW KEYS** and **MARK** to review

Nav Status



To navigate — follow the navigation arrow

Navigation arrow

Distance to destination or next point in your trip