

 
# LDT-3002

## Installation and Operation Instructions


The LDT-3002 combines up to three temperature sensors in one housing. (Since the LDT-3002 is packed with different options, you may not have all three sensors.) It shows the temperature in either °F or °C, selectable by the user. This unit fits in a standard 2 1/8" (54 mm) hole used by most marine equipment manufacturers.

### Mounting

The LDT-3002 mounts in any dash or flat panel that's at least 2 1/2" (64 mm) in diameter. To mount the unit, first make certain there is at least 3 3/4" (95 mm) from the *front* of the dash to any obstruction behind the dash. Also, be sure there is room to route the power and sensor cables. The *maximum* usable dash thickness is 1 1/8" (28.5 mm).


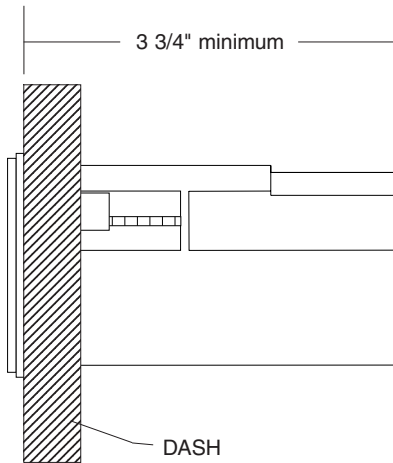


TIGHTEN  
THESE  
SCREWS

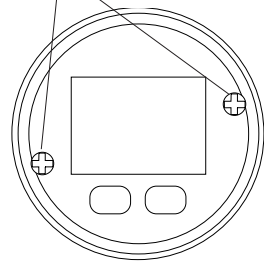 

When you determine the location for the LDT-3002, drill a 2 1/8" (54 mm) hole in the dash. Slide the LDT-3002 through the hole from the front of the dash. Align it so that it's straight, then tighten the two screws with a phillips-head screwdriver.

  Place the push-buttons into the holes in the bezel and snap it on to the LDT-3002. The unit is now ready for wiring.

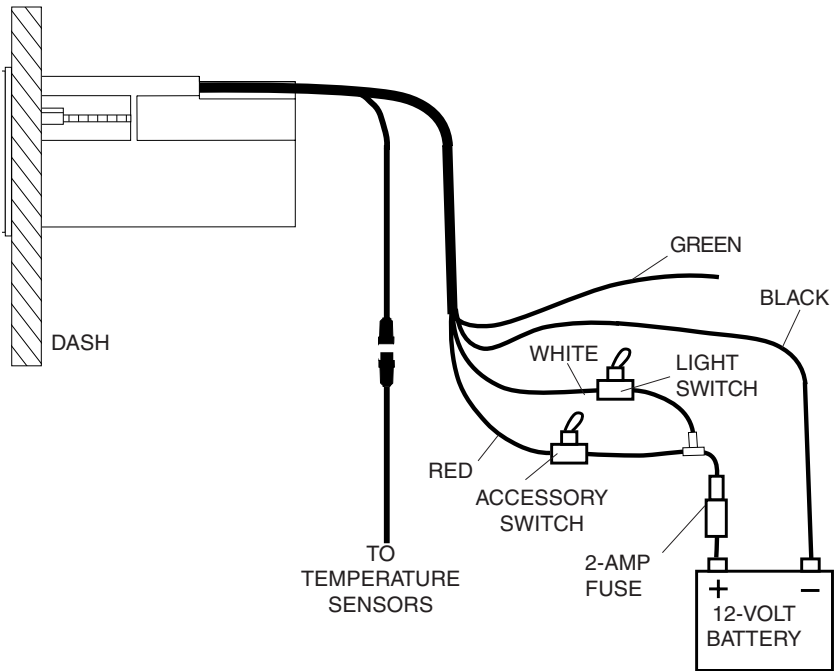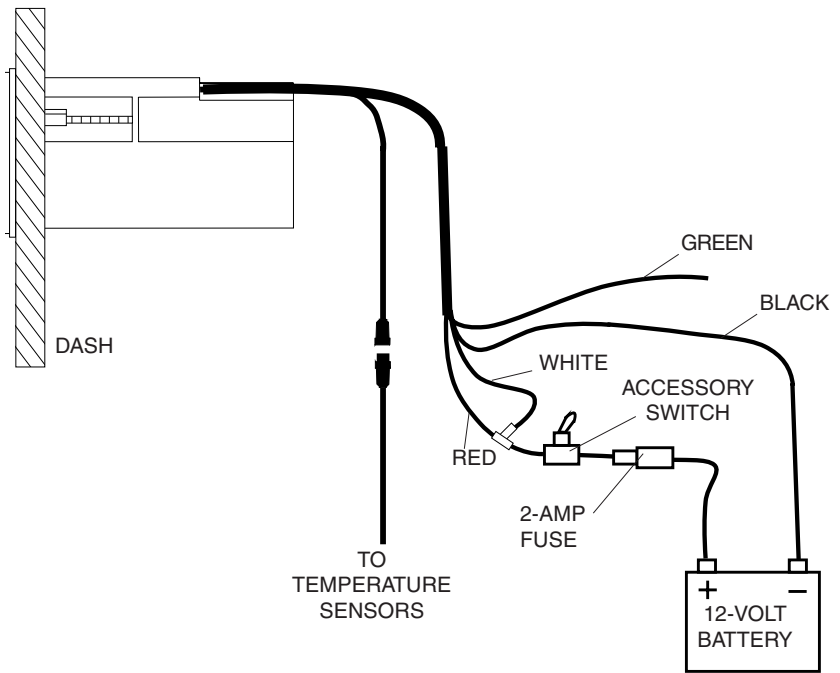

## **WIRING**

Connect the wires as shown in the diagrams on the opposite page. The LDT-3002 operates from 10 to 15 vdc (12-volt system). You can connect the wires as shown in the diagram at the top of the page using only one accessory switch (not included), which switches the unit's lights on at the same time the unit is turned on, or you can wire the lights to a separate switch as shown at the bottom of the page. Regardless of which wiring method you use, the LDT-3002 must be wired to a 2-amp fuse! Failure to fuse this product will void the warranty and could result in damage to the unit or your boat.

Connecting the green wire to ground forces the LDT-3002 into showing the temperature in Celcius when it's turned on. Otherwise, it shows the temperature in Fahrenheit at power-on. If you don't want the temperature in Celcius at power-on, cut the green wire and tape the end.

The unit won't be harmed if the power wires are connected backwards, however, it won't work until they're properly connected.

## **SENSORS**

The LDT-3002 can use the following sensors:

TS-W2BK          Two temperature sensors - Water and Temp 2.

TS-3BK            One temperature sensor - Temp 3 only.

We recommend you use the LDT-3002 with the above sensors in the following combination:

 
One TS-W2BK. This gives you two temperature displays - Water and T2.

or

One TS-W2BK and one TS-3BK. This gives you three temperature displays - Water, T2, and T3.

For example, you can connect the TS-W2BK temperature sensors and mount the sensor labeled "water" on the transom to measure surface water temperature and the sensor labeled "T2" in the live well or on the hull for outside air temp. The TS-W3BK has an extra connector so you can attach the TS-2BK temperature sensor to it, then attach the TS-W3BK to the LDT-3002 and have three separate temperature displays.

The temperature sensors can be mounted in any convenient location. Use #8 stainless steel screws to attach the sensor to the hull. (Screws not included.) When mounting the water temperature sensor, make certain

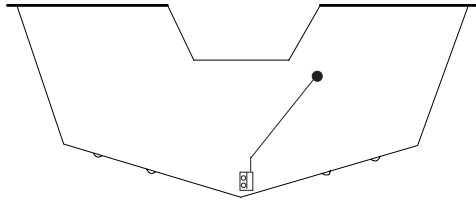

to place it on the transom where it will be in contact with the water at all times, if possible. (See the above diagram.)

### OPERATION

To use the LDT-3002, simply turn the power on. The water temperature shows in degrees Fahrenheit (or Celcius if the green wire is grounded). The LDT-3002 has up to three temperature displays. To switch between these modes, simply press the mode key.

To change the temperature displays from Fahrenheit to Celsius, simply press the °F / °C key. Press this key again to switch back to °F.

### Water Temperature

The first temperature to appear after turning the LDT-3002 on is the water temperature. This sensor is typically mounted on the transom and measures surface water temperature.



 
 
 
### T2 Temperature

The second temperature to appear is T2. This sensor can be mounted in a live well, on the hull to measure outside air temperature, or just about any other location.



### T3 Temperature

If you have the T3 temperature sensor installed, it appears after T2. This sensor can also be mounted in a live well, on the hull to measure outside air temperature, or just about any other location.

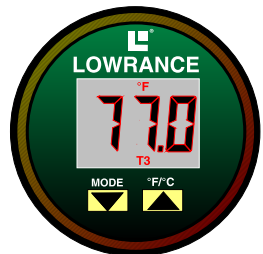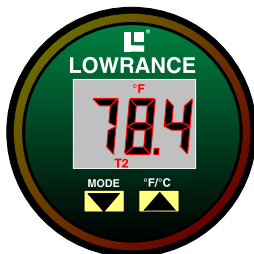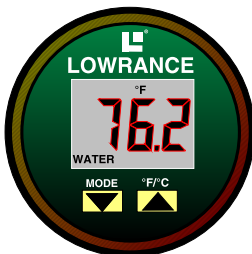

## **LOWRANCE ELECTRONICS FULL ONE-YEAR WARRANTY**

"We", "our", or "us" refers to LOWRANCE ELECTRONICS, INC., the manufacturer of this product. "You" or "your" refers to the first person who purchases this product as a consumer item for personal, family, or household use.

We warrant this product against defects or malfunctions in materials and workmanship, and against failure to conform to this product's written specifications, all for one year (1) from the date of original purchase by you. WE MAKE NO OTHER EXPRESS WARRANTY OR REPRESENTATION OF ANY KIND WHATSOEVER CONCERNING THIS PRODUCT. Your remedies under this warranty will be available so long as you can show in a reasonable manner that any defect or malfunction in materials or workmanship, or any non-conformity with the product's written specifications, occurred within one year from the date of your original purchase, which must be substantiated by a dated sales receipt or sales slip. Any such defect, malfunction, or non-conformity which occurs within one year from your original purchase date will either be repaired without charge or be replaced with a new product identical or reasonably equivalent to this product, at our option, within a reasonable time after our receipt of the product. If such defect, malfunction, or non-conformity remains after a reasonable number of attempts to repair by us, you may elect to obtain without charge a replacement of the product or a refund for the product. THIS REPAIR, REPLACEMENT, OR REFUND (AS JUST DESCRIBED) IS THE EXCLUSIVE REMEDY AVAILABLE TO YOU AGAINST US FOR ANY DEFECT, MALFUNCTION, OR NON-CONFORMITY CONCERNING THE PRODUCT OR FOR ANY LOSS OR DAMAGE RESULTING FROM ANY OTHER CAUSE WHATSOEVER. WE WILL NOT UNDER ANY CIRCUMSTANCES BE LIABLE TO ANYONE FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR OTHER INDIRECT DAMAGE OF ANY KIND.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty does NOT apply in the following circumstances: (1) when the product has been serviced or repaired by anyone other than us, (2) when the product has been connected, installed, combined, altered, adjusted, or handled in a manner other than according to the instructions furnished with the product, (3) when any serial number has been effaced, altered, or removed, or (4) when any defect, problem, loss, or damage has resulted from any accident, misuse, negligence, or carelessness, or from any failure to provide reasonable and necessary maintenance in accordance with the instructions of the owner's manual for the product.

We reserve the right to make changes or improvements in our products from time to time without incurring the obligation to install such improvements or changes on equipment or items previously manufactured.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

REMINDER: You must retain the sales slip or sales receipt proving the date of your original purchase in case warranty service is ever required.

**LOWRANCE ELECTRONICS**  
12000 E. SKELLY DRIVE TULSA, OK 74128  
(800) 324-1356

## Lowrance's UPS Return Service - U.S.A. Only

Lowrance Electronics and United Parcel Service (UPS) are proud to offer all of our customers free shipping for all units sent to us for repair or service. If you have to send this unit to the factory, and you are in the continental United States (excluding Alaska and Hawaii), use the enclosed UPS shipping label for easy, free shipping to our factory customer service department. There are six easy steps:

1. Call Lowrance at the toll-free number on the back of this manual for a Return Authorization (RA) number and instructions about what accessories to return. **Do not return a product to the factory without a Return Authorization (RA) Number!**
2. Pack your unit and any accessories in the original shipping container, if possible. **Be sure to include proof of purchase for warranty verification!**
3. Write a brief note detailing the problem you're having with the unit. Please include your name, address, and daytime telephone number.
4. Please include payment for non-warranty repairs. Check, money order, Visa, or MasterCard may be used.
5. Fill in your name, address, zip code, date, and RA number in the blanks provided on the UPS form included with your unit.
6. Attach the label to the shipping box, tear off the tab for your receipt and give the package to any UPS driver or take the package to any UPS Customer Center. You will not be charged for this shipment.

That's it! Your unit will be shipped to Lowrance's customer service department at no charge to you. Our normal in-plant turnaround on repairs is 3 working days. Units under warranty will be returned to you at no charge.

### **NOTE!**

Lowrance will pay UPS surface shipping charges both to and from the factory for this unit in the event it needs repair. Your unit is insured against loss or shipping damage when you use the enclosed UPS label.

This UPS shipping offer is good only in the continental United States.

Lowrance Electronics may find it necessary to change or end our shipping policies, regulations, and special offers at any time. We reserve the right to do so without notice.

## **How to Obtain Service (Canadian Customers Only)**

We back your investment in quality products with quick, expert service and genuine Lowrance replacement parts. If you need service or repairs, contact the Lowrance Factory Customer Service Department at the toll-free number listed below. A technician may be able to solve the problem and save you the inconvenience of returning your unit. You will be asked for your unit's serial number.

**800-324-1356**

Canada Only. Monday through Friday 8:00 A.M. - 8:00 P.M. Central Time.

When sending a product for repair, please do the following:

1. Always use the original shipping container and filler material the product was packed in when shipping your product.
2. Always insure the parcel against damage or loss during shipment. Lowrance does not assume responsibility for goods lost or damaged in transit.
3. For proper testing, repair, and service, send a brief note with the product describing the problem. Be sure to include your name, return shipping address, and a daytime telephone number.

## **How to Obtain Service (International Customers Only - Except Canada)**

If you need service or repairs, contact the dealer in the country you purchased your unit.

**WARRANTY REPAIR WILL BE HONORED ONLY IN THE  
COUNTRY UNIT WAS PURCHASED.**

Please follow the shipping instructions shown below on this page if you have to mail your unit to the dealer. For proper testing, repair, and service, send a brief note with the product describing the problem. Be sure to include your name, return shipping address, and a daytime telephone number.

## **Accessory Ordering Information - All Countries**

To order accessories such as power cables or transducers, please contact:

1. Your local marine dealer. Most quality dealers that handle marine electronic equipment should be able to assist you with these items. Consult your local telephone directory for listings.
2. Canadian customers only can write:  
Lowrance/Eagle Canada, 919 Matheson Blvd., E. Mississauga, Ontario L4W2R7  
or fax 416-629-3118



Your unit's serial number

## **How to Obtain Service - U.S.A. Only**

We back your investment in quality products with quick, expert service and genuine Lowrance® replacement parts. If you're in the United States and you have questions, please contact the Factory Customer Service Department using our toll-free number listed below. You must send the unit to the factory for warranty service or repair. Please call the factory before sending the unit. You will be asked for your unit's serial number (shown above). Use the following toll-free number:

**800-324-1356**

U.S.A. only. Monday through Friday 8:00 A.M. - 8:00 P.M. Central time, except holidays.

Your unit is covered by a full one-year warranty. (See page 5 for complete warranty details.) If your unit fails and the failure is not covered by the original warranty, Lowrance has a flat-rate repair policy that covers your unit and accessories packed with the unit at the factory. There is a 180-day warranty on all non-warranty repairs from the factory, which is similar to the original warranty, but is for 180 days rather than one year. For further details, please call us at the above number.

Lowrance also gives you free UPS shipping from anywhere in the continental United States both to and from the factory for all warranty repairs. You can also use the enclosed UPS shipping label for non-warranty shipments. See the inside of this flyer for more information. Remember, non-warranty repairs are subject to Lowrance's published flat-rate charges and 180-day warranty.

Copyright © 1996, Lowrance Electronics, Inc. All rights reserved.

LITHO IN U.S.A.

988-0099-06